

TASETO Contrast Paint (for magnetic particle inspection)

"TASETO Contrast Paint" forms a thin film on specimen surface, providing a white background to enhance visible magnetic particle indications.

FEATURE

1. Provide high contrast on the specimen surface for visible magnetic particle indications, to make the indications easy to see.
2. Very quick drying.
3. Easy to remove by acetone, or wire brush afteruse.
4. Non-Chlorinate and Non-CFC.


TYPICAL PROPERTIES

APPEARANCE	WHITE DISPERSION LIQUID
Specific Gravity	0.97



METHOD OF USE

1. Inspection area should be cleaned and dried prior to testing,
2. Shake aerosol can thoroughly until agitator rattles.
3. Keep aerosol can 10 ~ 20cm away from surface, apply a uniform thin film to the inspection area, wait about one minute to allow the film to dry,
4. Magnetize the inspection area and apply magnetic particle dispersion.
5. Removal it by acetone after use.

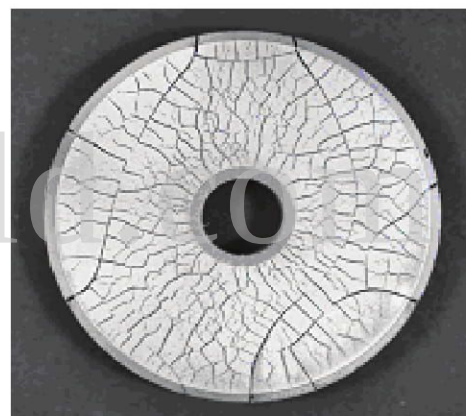

PRECAUTION FOR USE

1. Aerosol propellant contains LPG, which is very inflammable, please does not use it near fire.
2. Avoid direct sunlight, high temperature, and high humidity.

PACKING UNIT

420ml Aerosol Can (12 Bottles in one carton box)